



SerieTI-4

Crosswise Ratios (by units)

Zone 1	Average	Ratio
3L-7L Left =	17,0	4,7
3R-7R Right=	17,0	4,7
18L-18R Center =	80,0	

Zone 2	Average	Ratio
3L-7L Left =	11,8	5,0
3R-7R Right=	11,8	5,0
18L-18R Center=	60,0	

Zone 3	Average	Ratio
3L-7L Left =	9,2	5,3
3R-7R Right=	9,2	5,3
18L-18R Center=	49,0	

Zone 4	Average	Ratio
3L-7L Left =	4,4	7,9
3R-7R Right=	4,4	7,9
18L-18R Center =	35,0	

Zone 5	Average	Ratio
3L-7L Left =	1,0	1,0
3R-7R Right=	1,0	1,0
18L-18R Center=	1,0	

Zone 6	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Zone 7	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Zone 8	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Crosswise Ratios (by ml)

Zone 1	Average	Ratio
3L-7L Left =	0,086	4,7
3R-7R Right=	0,086	4,7
18L-18R Center =	0,402	

Zone 2	Average	Ratio
3L-7L Left =	0,049	5,0
3R-7R Right=	0,049	5,0
18L-18R Center=	0,251	

Zone 3	Average	Ratio
3L-7L Left =	0,027	5,3
3R-7R Right=	0,027	5,3
18L-18R Center=	0,144	

Zone 4	Average	Ratio
3L-7L Left =	0,013	7,9
3R-7R Right=	0,013	7,9
18L-18R Center =	0,103	

Zone 5	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

Zone 6	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

Zone 7	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center =	0,000	

Zone 8	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.



