



Official Lane Maintenance and Capital Equipment Provider

DIRECT+
Conditioning System



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date:

Pattern Type:

Pattern Difficulty:

Pattern Designer:

Pattern Volume (ml):

Surface Information

Surface Type:

Surface Brand:

Age:

Pattern Parameters

Pattern Number:

Pattern Name:

Mode:

Forward Speed:

Start Cleaner Spray:

Start Squeegee:

Start Oiling:

Split Pattern:

Supplies Information

Lane Cleaner:

Cleaner Mixture Ratio:

Cleaner Transition Distance: Authority22


Cleaner Spray End Distance: Envoy

Lane Conditioner:

Notes:

	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone End Distance	8	18	26	32	38			
Zone Ratio	L 2,0 : 1	2,0 : 1	2,8 : 1	4,1 : 1	1,0 : 1	### : 1	### : 1	### : 1
	R 2,0 : 1	2,0 : 1	2,8 : 1	4,1 : 1	1,0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	8,03	7,31	4,15	2,27	0,00	0,00	0,00	0,00

ZONE	7 Pin Side																	Board Number												10 Pin Side										
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	18	18	18	28	38	48	62	70	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	78	70	62	48	38	28	18	18	18			
2	15	15	15	20	25	37	41	49	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	57	49	41	37	25	20	15	15	15			
3	9	9	9	12	15	18	21	32	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	43	32	21	18	15	12	9	9	9				
4	4	4	4	6	8	10	12	23	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	23	12	10	8	6	4	4	4			
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1			
6																																								
7																																								
8																																								

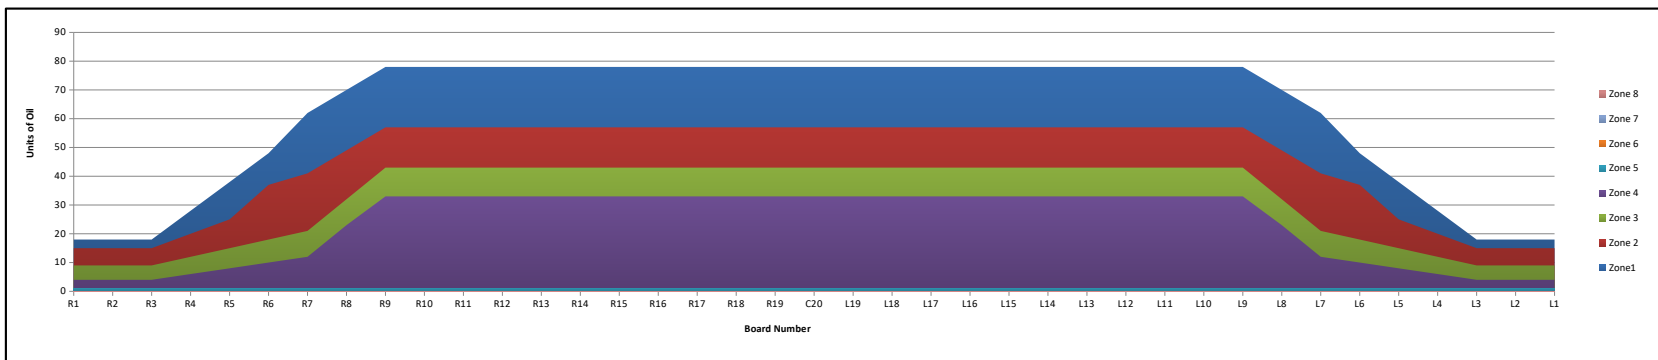



LVI Reinikainen III

Crosswise Ratios (by units)

Zone	Average	Ratio
Zone 1		
3L-7L Left =	38,8	2,0
3R-7R Right=	38,8	2,0
18L-18R Center =	78,0	
Zone 2		
3L-7L Left =	27,6	2,0
3R-7R Right=	27,6	2,0
18L-18R Center=	57,0	
Zone 3		
3L-7L Left =	15,0	2,8
3R-7R Right=	15,0	2,8
18L-18R Center=	43,0	
Zone 4		
3L-7L Left =	8,0	4,1
3R-7R Right=	8,0	4,1
18L-18R Center =	33,0	
Zone 5		
3L-7L Left =	1,0	1,0
3R-7R Right=	1,0	1,0
18L-18R Center=	1,0	
Zone 6		
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	
Zone 7		
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center =	#JAKO/0!	
Zone 8		
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Crosswise Ratios (by ml)

Zone	Average	Ratio
Zone 1		
3L-7L Left =	0,130	2,0
3R-7R Right=	0,130	2,0
18L-18R Center =	0,262	
Zone 2		
3L-7L Left =	0,116	2,0
3R-7R Right=	0,116	2,0
18L-18R Center=	0,239	
Zone 3		
3L-7L Left =	0,050	2,8
3R-7R Right=	0,050	2,8
18L-18R Center=	0,144	
Zone 4		
3L-7L Left =	0,020	4,1
3R-7R Right=	0,020	4,1
18L-18R Center =	0,083	
Zone 5		
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	
Zone 6		
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	
Zone 7		
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center =	0,000	
Zone 8		
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

